
 

## 5.Installation

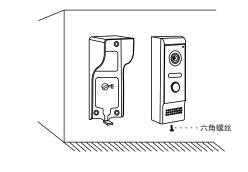



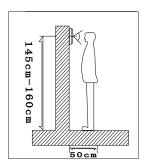


Indoor unit Standard installation height is 145cm~160cm (distance between screen centre and the floor)


Outdoor unit Standard installation height is 145cm~160cm (distance between camera and the floor)

# 6.Parameters

 Indoor unit		Outdoor unit	
Power Supply	Input:AC100-240V Output: DC12v-15v 1500mA	Power Supply	Receive power from monitor
Power	Standby:≤1W Working:≤10W	Power	Standby:≤0W Working:≤2W
Screen	TFT Liquid Crystal Display	Camera	30W
Wiring	4 OR 5 PIN Line RVV	Night Version	WLED,Super backlight compensation
Timing	Intercom:90 seconds Monitoring:90 seconds	Working Temperature	-30 ℃ − +60 ℃
Ringtone	25 chord		
Working Temperature	-20°C − +60°C		

# VIDEO DOOR PHONE FOR VILLA USER MANUAL

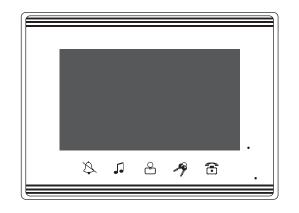

















Please read all of these instruction before installation

## 1.Indoor unit

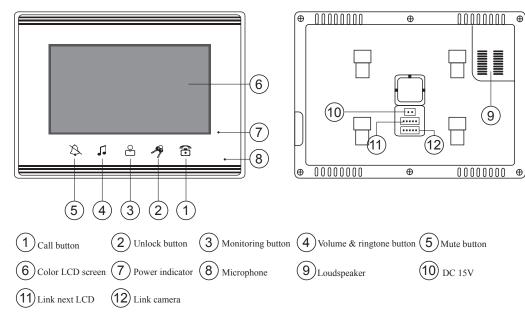

## 2.Outdoor unit

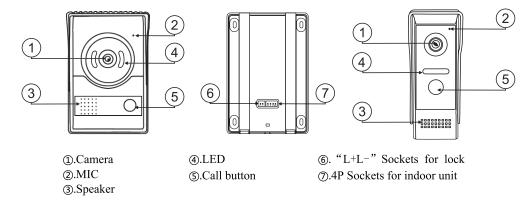

# **3.Operating Instructions**

#### a.Settings

Three settings can be adjusted by the turbine(on the right side)

- 1.Brightness of screen
- 2.Color of screen
- 3. Volume of communication

## b.Indoor station volume&music setting

1.Music settings

Press the "Monitor button" enter into working state, then press "Ring tone &Ring volume adjustment button", you will hear the ring at the same time ,you can adjust the ring tone,36 ring tone can be chosen, after all ,closed the monitor button, finished the music settings.

#### 2.Ring volume settings

Press the "Monitor button" enter into working state, then press "Ring tone &Ring volume adjustment button", you will hear the ring and then keep pressing this button hold 2 seconds, the ring volume will change to higher or lower. There have three levels to choose, you can choose the best.

## 3.Ring cancel settings

4 wire indoor monitor: Press the "Monitor button" enter into working state, then press "Ring cancel button" hold 5 seconds, the ring tone will be "OPEN" or "CLOSE".

5 wire indoor monitor: Press the "Monitor button" enter into working state, then press "Ring cancel button" less 1 second, the ring tone will be "OPEN" or "CLOSE".

This function won't affect the image from the screen.

**Note:** you can press the "Ring tone &Ring volume adjustment button" to test whether you had succeed to setting this function.

#### c.Swipe card open the door

Under the working status, close the card to the read card area, if it is an authorized user card, will hear the sound "Di". Unlocking at the same time. If the card is illegal card, will make sounds "Di Di", prompt that the card is no authorized.

#### d.Production Management Card

Toggle switch, flip the switch up, then turn on the power, and enter the setting mode after prompting a beep. Swipe the first card is add card, swipe second card is delete card, then turn off power, set the switch down to reset. This means that setting the management card is successful.

# 4. Connection of the video doorphone

